

Product Data Sheet

Package-on-Package (PoP) Flux 89-LV

Features

- Application by dipping or dispensing
- Optimized for Pb-Free (SAC alloy) applications
- Excellent solderability with Cu-OSP, Au/Ni, and Immersion Ag finishes
- Air reflow
- Bubble-free packaging

Introduction

PoP Flux 89-LV is a thixotropic no-clean flux designed for package-on-package applications with Pb-free solders. **PoP Flux 89-LV** has a unique activator system that provides enhanced solderability onto all common metallizations.

Properties

Flux type Classification:	Value	Test Method
ROL1	J-STD-004 (IPC-TM-650: 2.3.32 and 2.3.33)	
Typical Viscosity:	12.5kcps	Cone and plate viscosity (5 minutes)
SIR (ohms, after reflow):	Pass (>10 ⁸ after 7 days @ 85°C & 85% RH)	J-STD-004 (IPC-TM-650: 2.6.3.3 IPC-B-24)
Typical Acid Value:	120mg KOH/g	Titration
Typical Tack Strength:	240g	J-STD-005 (IPC-TM-650: 2.4.44)
Shelf Life:	1 year (0°- 30°C)	Viscosity change/microscope examination
Color:	Light Amber	Visual


All information is for reference only. Not to be used as incoming product specifications.

Application

The volume of flux on the package can be optimized by changing equipment parameters. Key variables include: sphere size, sphere pitch, flux shear speed and dwell. Viscosity can be optimized per application by appropriate equipment setup.

Cleaning

PoP Flux 89-LV is designed for no-clean applications, and can be left in place on the final package. If necessary, flux residues can be removed by using a commercially available flux cleaner. Contact an Indium Corporation Technical Support Engineer for recommendations on flux cleaners.

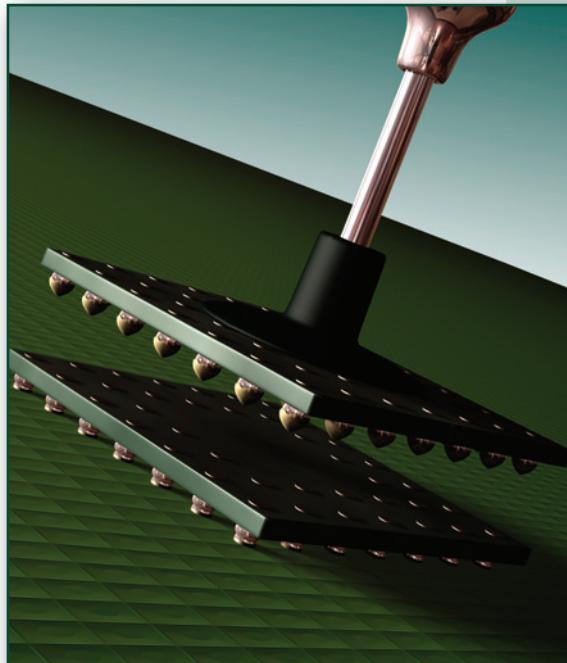

Packaging

PoP Flux 89-LV is only available in air-free 10cc or 30cc syringes.



OVER→

Form No. 98511 (A4) R0

www.indium.com

askus@indium.com

ASIA: Singapore, Cheongju: +65 6268 8678
 CHINA: Suzhou, Shenzhen, Liuzhou: +86 (0)512 628 34900
 EUROPE: Milton Keynes, Torino: +44 (0) 1908 580400
 USA: Utica, Clinton, Chicago: +1 315 853 4900



©2008 Indium Corporation

ISO 9001
REGISTERED

PoP Flux 89-LV

Storage

For maximum shelf life, **PoP Flux 89-LV** syringes and cartridges should be stored tip down. Storage temperatures should never exceed 30°C. After removing from cold storage, **PoP Flux 89-LV** should be allowed to stand for at least 4 hours at room temperature before using.

Technical Support



Indium Corporation sets the industry standard in providing rapid response, on-site technical support for our customers worldwide. Indium's team of Technical Support Engineers can provide expertise in all aspects of Materials Science and Semiconductor Packaging process applications.

Material Safety Data Sheets

The MSDS for this product can be found online at <http://www.indium.com/techlibrary/msds.php>

Reflow

Recommended Profile:

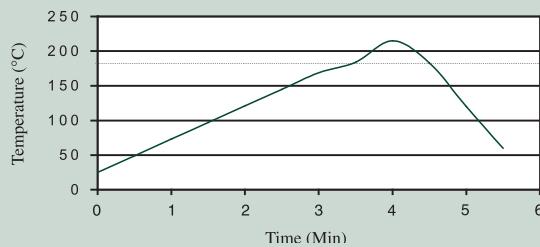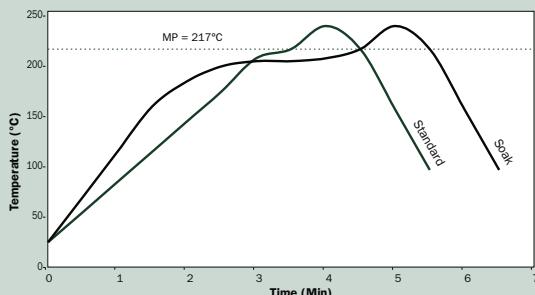

Peak reflow temperature should be <250°C in an air or nitrogen atmosphere, with a linear ramp up to approximately 30°C above the solidus temperature.

This product data sheet is provided for general information only. It is not intended, and shall not be construed, to warrant or guarantee the performance of the

products described which are sold subject exclusively to written warranties and limitations thereon included in product packaging and invoices.

www.indium.com

askus@indium.com

ASIA: Singapore, Cheongju: +65 6268 8678

CHINA: Suzhou, Shenzhen, Liuzhou: +86 (0)512 628 34900

EUROPE: Milton Keynes, Torino: +44 (0) 1908 580400

USA: Utica, Clinton, Chicago: +1 315 853 4900



©2008 Indium Corporation

ISO 9001
REGISTERED